



⚠WARNING: This product is designed for use with the Safewaze 65' & 120' Technical Personnel Winch. Users must read and follow instructions supplied with this product at the time of shipment. Failure to do so may result in serious injury or death. Avoid contact with hazards. Do not alter or misuse this product. Do not remove label. Product contains magnets.

► PRODUCT SPECIFICATIONS


- **Torque Limiting Coupler:** Slip Force of 420 lbs. (195 kg) +/-10 lbs.
- **Drill:** 1/2" Drill Chuck Required
- **Materials:** Aluminum, Steel, and Magnet.



► INSTALLATION STEPS

The Torque Limiting Coupler should only be used on the Power Gear Ratio (1).

1. Place the Torque Limiting Coupler (2) over the Power Gear Ratio.
2. Install into place with the attached Detent Key (3) through the top of the Power Gear Ratio.
3. Connect drill (4) to Torque Limiting Coupler.

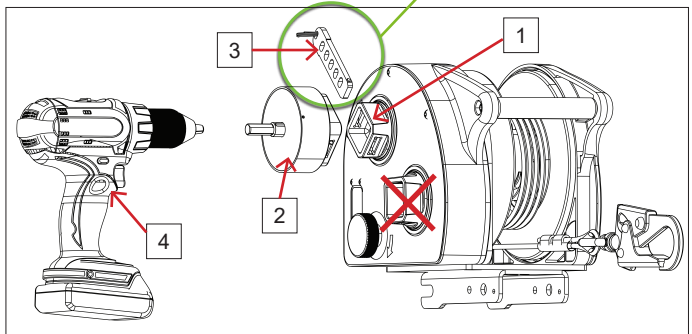

► INSPECTION & MAINTENANCE

- Prior to each use, inspect the device for possible deficiencies and verify the product is safe for use.
- A Competent Person, other than the user, must inspect the device at least once annually. So long as the system and all components pass inspection, it may remain in service.
- The device can be cleaned with water and mild soap. Excess water shall be blown out with compressed air. Hardware can be wiped off with a clean, dry cloth.
- The user shall remove all dirt, possible corrosives, and contaminants from the product prior to, and after, each use. Never use any type of corrosive substance to clean the device.
- Do not store product if wet or damp. Allow equipment to fully dry before being stored.



SAFEWAZE

019-11059

Manual sobre el acoplador limitador de par

⚠️ ADVERTENCIA: Este producto está diseñado para usarlo con el cabrestante para personal técnico de 65' y 120' de Safewaze. Los usuarios deben leer y seguir las instrucciones recibidas con este producto en la entrega. De lo contrario, se podrían producir lesiones graves o la muerte. Evite el contacto con materiales peligrosos. No modifique el producto ni lo use de manera incorrecta. No quite la etiqueta. El producto contiene imanes.

► ESPECIFICACIONES DEL PRODUCTO


- **Acoplador limitador de par:** fuerza de deslizamiento de 420 lb (195 kg) +/-10 lb
- **Taladro:** mandril de 1/2" necesario
- **Materiales:** aluminio, acero e imán.



► PASOS DE INSTALACIÓN

El acoplador limitador de par solo debe usarse en la relación de engranaje de potencia (1).

1. Coloque el acoplador limitador de par (2) sobre la relación de engranaje de potencia.
2. Instálelo con la llave fijadora incluida (3) por encima de la relación de engranaje de potencia.
3. Conecte el taladro (4) al acoplador limitador de par.

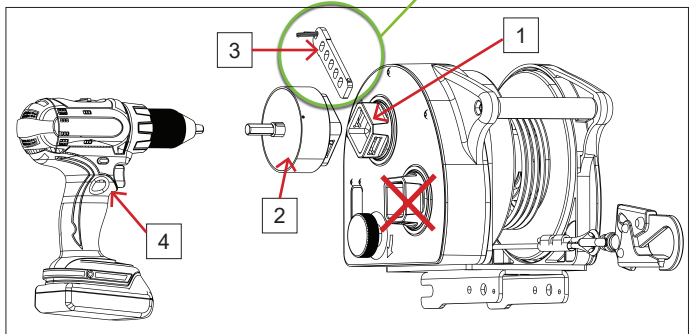

► INSPECCIÓN Y MANTENIMIENTO

- Antes de cada uso, inspeccione el dispositivo para detectar posibles defectos y verifique que el producto se pueda usar de manera segura.
- Una persona competente, que no sea el usuario, debe inspeccionar el dispositivo al menos una vez al año. Siempre que el sistema y todos sus componentes pasen la inspección, puede permanecer en servicio.
- El dispositivo puede limpiarse con agua y jabón neutro. El exceso de agua deberá eliminarse con aire comprimido. El hardware puede secarse con un paño limpio y seco.
- El usuario debe eliminar toda la suciedad, posibles sustancias corrosivas y contaminantes del producto antes y después de cada uso. Nunca utilice ningún tipo de sustancia corrosiva para limpiar el dispositivo.
- No guarde el producto húmedo o mojado. Permita que el equipo se seque completamente antes de guardarlo.