




SAFEWAZE PERSONNEL WINCH BRACKET UPDATE INSTRUCTIONS

Safewaze has redesigned the device bracket of the Personnel Winch to accommodate Xtirpa systems.

In order to retrofit an existing device in the field, please follow these instructions:

1. Order the new device bracket (024-11050, bracket and fasteners included).
2. Remove current fasteners and bracket from Personnel Winch. This may require some force if Loctite is present on original bolts.
3. Align the new bracket onto the device as shown.
4. Reinsert new fasteners as shown.
5. Apply red Loctite to bolts.
6. Torque bolts to 80 Nm. Be careful not to over-torque.

024-11050 Fasteners:
(2) M12 x 1.75mm Bolts
(2) Flat Washers

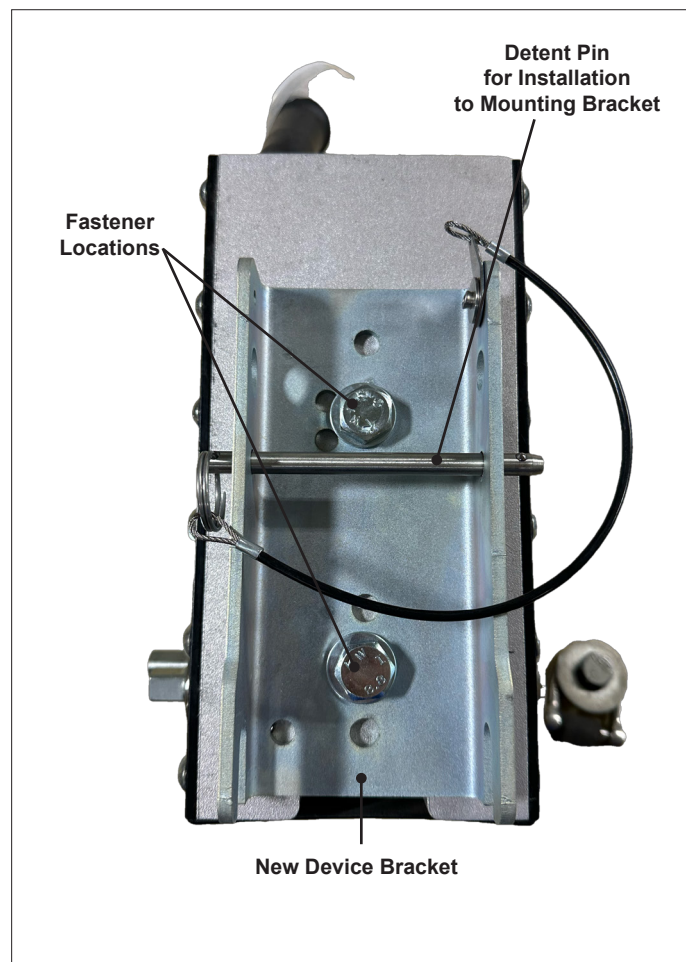

Refer to the Safewaze manual provided with the product, or available online, for proper use and additional installation information.

For any questions regarding the information in this Instruction Sheet, please contact Customer Service at (800) 230-0319.