

Parapet Wall Thickness:

Minimum- 2.36 inch (60 mm) Maximum- 14.1

inch (360 mm)

Dimensions: 355 mm (h) x 577.5 mm (w)

12. TERMINOLOGY:

Authorized Person: A person assigned by the employer to perform duties at a location where the person will be exposed to a fall hazard (otherwise referred to as "user" for the purpose of these instructions).

PARAPET ANCHOR

Rescuer: Person or persons other than the rescue subject acting to perform an assisted rescue by operation of a rescue system.

Certified Anchorage: An anchorage for fall arrest, positioning, restraint, or rescue systems that a qualified person certifies to be capable of supporting the potential fall forces that could be encountered during a fall or that meet the criteria for a certified anchorage prescribed in this standard.

Qualified Person: A person with a recognized degree or professional certificate and with extensive knowledge, training, and experience in the fall protection and rescue field who is capable of designing, analyzing, evaluating and specifying fall protection and rescue systems to the extent required by this standard.

Competent Person: One who is capable of identifying existing and predictable hazards in the surroundings or working conditions which are unsanitary, hazardous, or dangerous to employees, and who has authorization to take prompt corrective measures to eliminate them.

13. LABEL AND MARKING:

Product Ref. No. Min. Breaking Strength Load Capacity Batch No. Material Manufacture Date	: Parapet Anchor : SW900 : 5000 lbs : 310 lbs : XXXXX : High Strength Alloy steel : XX / 2018	DO NOT REMOVE TH Method of installation - Cert easily bis installed on paragets of buildings without desempage the situation Strikenses with of pragate or which he installation is possible 2.30" Maximum width of paraget on which he installation is possible 1.417".	S LABEL.	WESTERNAY 200 Header Co. Caroot NO. 2005 (State Control No. 2005) (State Control No. 2005) (State Control No. 2005) Warning: Road Instruction Manual Countrily Button Use ANSI 2250 1-2007, ANSI A30, 230 2004, \$100.05.05.
	Avoid contact with Make only comp. For use on mobal Avoid using in en Inspection – Prot months. If this equipment returned to Safes	ico-brisca ed filos poducis er biliza instituto instituto may result in anticas in est pilos pedigo er direstina sufficia. In est pilos pedigo er direstina sufficia. In comoria sinchicana baring maximum biotiseas of 13.4 Anoid conted with a comorial sinchicana baring maximum biotiseas of 13.4 Anoid conted with a technical properties of the comment of the context of the content of the context of the cont	ny sharp edge or shrasive surface. Il may directly affect the functionality. If person must check & record at intervals of every 3	

13. INSPECTION AND MAINTENANCE LOG:

SERIAL NUMBER:				
MODEL NUMBER:				
DATE OF PURCHASE:		DATE OF FIRST USE:		
INSPECTION DATE	INSPECTIONS ITEMS NOTED	CORRECTIVE ACTION	MAINTENANCE PERFORMED	
Approved by:				
Approved by:	I			
Approved by:	1			
Approved by:				
Approved by:				
Approved by:				
Approved by:	· 			
Approved by:				



322 Industrial Court * Concord, Nc 28025 Ph: 704-262-7893 * Fax: 704-262-9051 www.safewaze.com



PARAPET ANCHOR SW900

INSTRUCTION MANUAL





PARAPET ANCHOR

Do not skip this instruction manual. Read the instruction manual carefully before using the equipment. Failure to do so may cause serious Injury or Death.

Safewaze

322 Industrial Court * Concord, NC 28025 Ph: 704-262-7893 * Fax: 704-262-9051 www.safewaze.com This manual must be read and understood in its entirety and used as part of fall protection training program as required by OSHA or any state regulatory agency. These instructions are intended to meet the manufacturer instructions as required by EN 795: 2012, ANSI Z 359.1: 2007 and OSHA. The user must fully understand the proper equipment use and limitations.

These Instructions apply to the Parapet Anchor: SW900


- PURPOSE: Safewaze's Parapet Anchor is a portable anchorage designed for fall arrest applications and is used in locations where a low parapet wall provides an anchor site. Do not hang, lift or support tools or equipment from this device.
- FALL ARREST: In this application, the parapet wall anchor is used as part of a complete fall arrest system. Such systems typically include a full body harness, and must include either a shock absorbing lanyard or self-retracting lifeline.
- 3. LIMITATIONS: The following application limitations must be recognized and considered before using this connector system is intended to be installed on a parapet wall up to 14.1 inches (360mm) thick
 This anchorage connector system is designed for use by one person with a combined weight (person, clothing, tools,
 - This anchorage connector system is designed for use by one person with a combined weight (person, clothing, tools, etc.) of no more than 310 lbs. (141 kg). Only one personal protective system may be connected to the anchorage connector.
 - Personal fall arrest systems must be rigged in such a way as to limit the free fall to a maximum of 6 feet (1.8 m)
- 4. ANCHORAGE STRENGTH: Anchorages selected for personal fall arrest systems (PFAS) shall have a strength capable of sustaining static loads, applied in the directions permitted by the PFAS, of at least: (A) 3,600 lbs. (16 kN) when certification exists or (B) 5,000 lbs. (22.2 kN) in the absence of certification. When more than one PFAS is attached to an anchorage (i.e.-beam, etc..), the anchorage strengths set forth in (A) and (B) above shall be multiplied by the number of personal fall arrest systems attached to the anchorage.

5. INSTALLATION REQUIREMENTS:

5.1 SUPERVISION: It is recommended that this equipment is installed under the supervision of a qualified person as defined by OSHA.

Structure to which the anchor is installed may be a maximum of 14.1 inches (360mm) thick and must meet strength requirements. The location must be safely accessible when connecting to or disconnecting from the anchor. Swing falls should not be permitted if injury could occur should the user fall. The location must be free of other equipment or moving parts. There must be adequate total fall clearance, and there must be a rescue means. The anchorage must allow the parapet wall anchor to hang in a vertical orientation. Do not install the parapet wall anchor on an incline, at an angle, or unside-down.

- 6. INSTALLATION: Parapet anchor is intended to be installed on a parapet wall up to 14.1 inches (360mm) thick.
 - Step 1: Unscrew the set screws so the points do not protrude into the anchor slot. Remove the detent pin and move the adjustable arm back far enough to allow the clamp to fit over the paranet wall.
 - **Step 2:** Make sure the top surface within the anchor slot is fully seated on the parapet wall.
 - Step 3: Slide the adjustable arm toward the parapet wall and reinsert the locking pin through the appropriate position setting holes.
 - Step 4: Tighten each set screw until it makes contact with the parapet wall. Hands tighten the screws until snug. Excessive torque can damage the parapet wall or the parapet wall anchor.

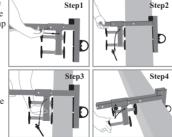

WARNING: Read and follow manufacturer's instructions for associated equipment (i.e. full body harness, shock absorbing lanyard, self-retracting lifeline, etc.) used in your personal fall arrest system.

7. CONNECTING TO THE PARAPET ANCHOR:

- The parapet wall anchor is an anchorage connector for a shock absorbing lanyard or a self-retracting lifeline.
 Contact Safewaze for information regarding other possible connecting subsystems.
- Make sure the connector (i.e. self-locking snap hook of lanyard) is fully engaged and locked onto the back D-ring (dorsal) of the body support.

PARAPET ANCHOR



- Make sure that the connections are compatible (size, shape, strength, etc.). If connecting a shock absorbing
 lanyard to the parapet wall anchor, follow the above instructions to connect one end of lanyard (shock absorber
 pack end) to body support and connect the other end to the parapet wall anchor making sure the self-locking
 snap hook is fully engaged and locked onto the D-ring.
- If using a self-retracting lifeline, it must be connected to the D-ring with a self-locking and self-closing
 Karabiner (attach the Karabiner to the anchorage location on Self retracting lifeline), the self-retracting
 lifeline must hang vertically. Then connect the lifeline end of the SRL to the body support (harness). Make sure
 the connector (i.e. self-locking snap hook, karabiner) is fully engaged and locked onto the anchorage
 connector, SRL and body support. Make sure connections are compatible (size, shape, strength, etc.).

WARNING: When attaching a self-retracting lifeline to a parapet wall anchor, make certain the SRL hangs vertically and freely (not at an angle).

If installing a horizontal lifeline, follow the manufacturer's instructions for installation and use provided with the horizontal lifeline system.

8. TRAINING: It is the responsibility of the user and the purchaser of this equipment to assure they are familiar with these instructions, trained in the correct care and use of, and are aware of the operating characteristics, application limits and the consequences of improper use of this equipment.

IMPORTANT: Training must be conducted without exposing the trainee to a fall hazard. Training should be repeated on a periodic basis.

9.0 INSPECTION:

9.1 FREQUENCY: Before each use, visually inspect the parapet anchor as per the below mentioned steps.
This equipment must be inspected by a competent person other than the user at least once in a year. Record the results of each formal inspection in the inspection log in section 13.

IMPORTANT

- Extreme working conditions (harsh environments, prolong use, etc.) may require increasing the frequency of inspections.
- If this equipment has been subjected to forces resulting from the arrest of a fall, it must be immediately removed from service and destroyed or returned to Safewaze for possible repair.

9.2 INSPECTION STEPS:

- Step 1: Inspect the parapet wall anchor for physical damage. Look carefully for any signs of cracks, dents or deformities in the metal.
- Step 2: Inspect the parapet wall anchor for signs of excessive corrosion.
- Step 3: Ensure that the working parts are free from excessive dirt, oil, or other build-up.
- Step 4: Inspect the D-ring, fixed arm, and fasteners. The D-ring must be free of cracks, dents or deformities in the metal. The fixed arm and bolt holding the D-ring must be undamaged and the nut fastened tightly to the bolt.
- Step 5: Inspect the points of the set screws. The points must not be broken and must be sharp enough to bite into a mild parapet wall.
- Step 6: Inspect the detent pin to ensure that it inserts fully through the position setting holes of the arms.
- Step 7: Inspect labels, all labels should be present and fully legible. Labels must be replaced if illegible or missing.
- Step 8: Inspect each system component or subsystem as per the manufacturer's instructions.
- Step 9: Record the inspection date and results in the inspection log.

Note: If inspection reveals a defective condition, remove the unit from service immediately and destroy or contact a factory authorized service center for repair.

Only Safewaze or parties authorized in writing may make repairs to this equipment.

10. MAINTENANCE, SERVICING & STORAGE:

- Clean the anchorage connector (parapet wall anchor) with mild soap detergent solution and rinse. The
 working parts may be sprayed sparingly with a moisture repelling agent. Excessive build-up of dirt,
 paint, etc. may prevent the anchorage connector from working properly.
- If you have any questions concerning the condition of your parapet wall anchor or have any doubt about putting it into service contact Safewaze immediately.

11. SPECIFICATIONS:

Material: Zinc Plated Steel

Minimum Breaking Strength: 5000 lbs. (25 kN) Maximum Capacity: 310 lbs. (141 kg) (one person)

Weight: 20 lbs. (9 kg±100 gm)